



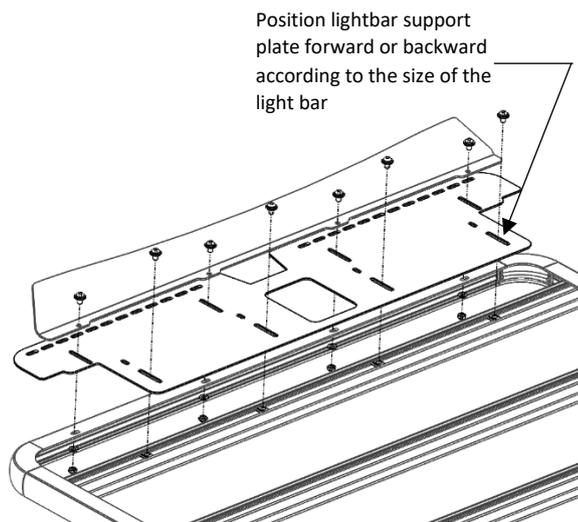

**WTA-LBS**

**Congratulations on the purchase of your Australian made Wedgetail Roof Rack accessory.**

**Please follow these instructions carefully**

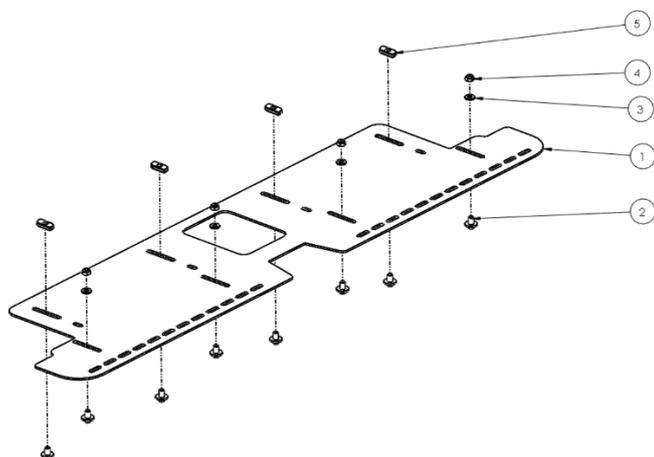


4. Once in the correct position tighten fasteners securely, check at frequent intervals.

### Wiring in perimeter Wedgetail extrusion

Holes can be drilled on the inside section of the perimeter extrusion to cater for lightbar wiring etc. Wiring gromets should be used to avoid water ingress.

However, holes should not be drilled through the wedgelock connection or the area where it is fastened, or the structural strength of the roof rack will be compromised.

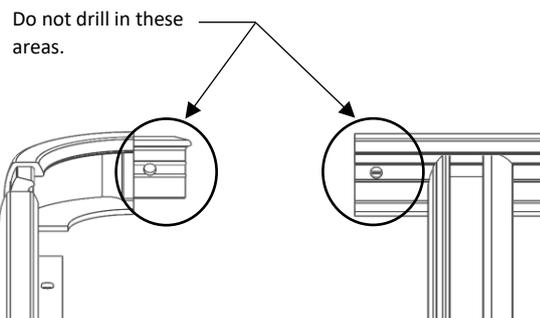

ITEM NO.	PART NAME	QTY
1.	Support Plate	1
2.	M8 Stainless Bolt and Washer	8
3.	M8 Flat Washer	4
4.	M8 Nyloc Nut	4
5.	M8 Channel Nut	4

1. Place the Light bar support plate on the Wedgetail platform when it is upside down.
2. Assemble the M8 bolt & washer and the channel nuts. Ensure each channel nut is 90 degrees to crossbar.
3. Assemble the wind deflector and support plate to front bar using M8 bolt and nuts provided.