

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.


Contact us if any parts appear missing, incorrect, or damaged.

Contact us if any question about the size of platform to ensure the correct fitment

Tools Required:

- Hex key (5mm)
- Spanner (10mm)

Kit Content

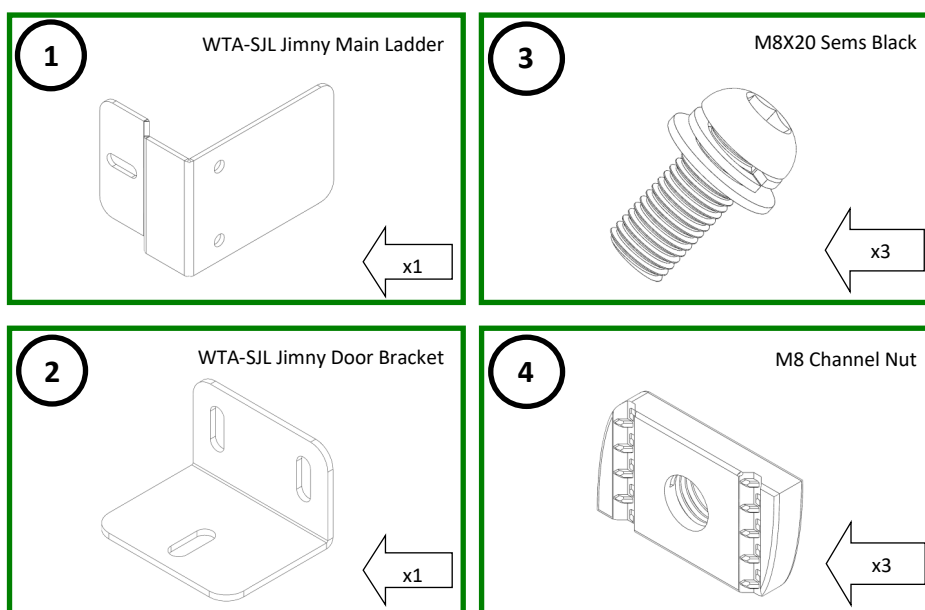

Wedgetail Accessory Fiamma Awning Bracket

Fitting Instruction




WTA-FAAB

1

- Shorten the cup bolts that come with the Fiamma awning to 17mm long this allows the awning to sit 15mm off the side of the rack)


2

- Loosely bolt Fiamma brackets to the upper awning bracket and lower awning bracket using the Fiamma shortened M6 Cup bolt and M6 nuts supplied in the Fiamma mounting kit.
- Only have the nuts on a couple of threads as this will allow for the next step.

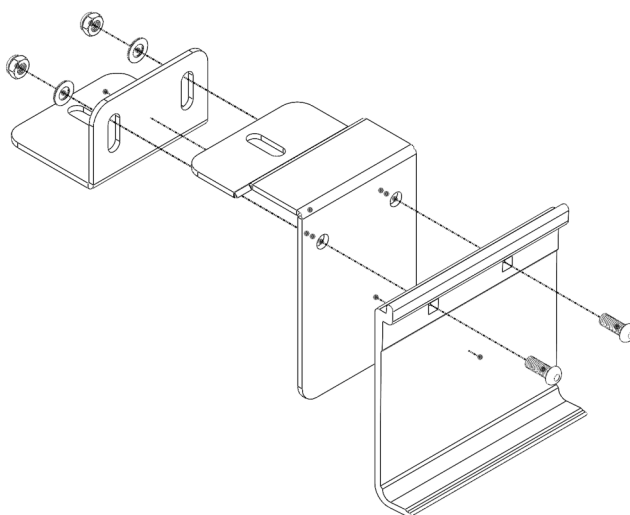


3

- Remove the lower bolts on the underside of the rack where you would like to mount the awning brackets, leaving the channel nut in the channel

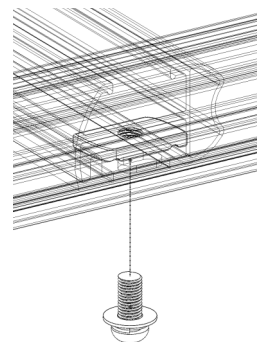

4

- Slide the awning brackets onto the rack
- At top of rack place M8 channel nut in channel and using the black M8 bolt supplied loosely bolt together securing the top of the

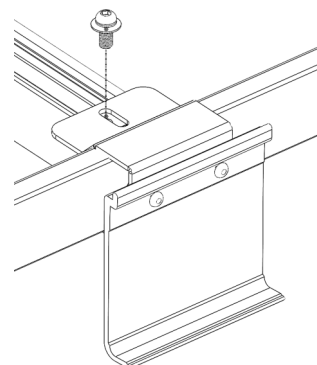

Wedgetail Accessory Fiamma Awning Bracket


Fitting Instruction



WTA-FAAB

5

- Re install black M8 bolt through the lower bracket and into the channel nut left in place in step 3

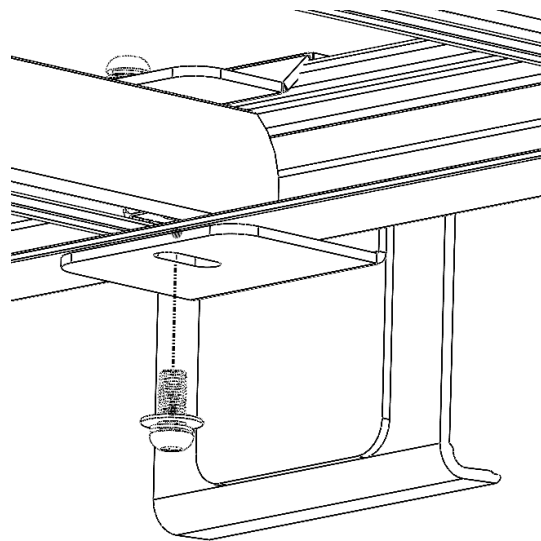

6

- Now you can tighten the M6 nuts holding all 3 parts of the bracket together. You will need to use an open-ended spanner and come in from the side.

7

- Now tighten all upper and lower M8 bolts holding the brackets to the rack.

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

Thank you for your purchase.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration