

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.






Contact us if any parts appear missing, incorrect, or damaged.

Contact us if any question about the size of platform to ensure the correct fitment

Tools Required:

- Hex key (5mm)
- Spanner (13mm)
- Drill Bit (5mm & 9mm)

Kit Content

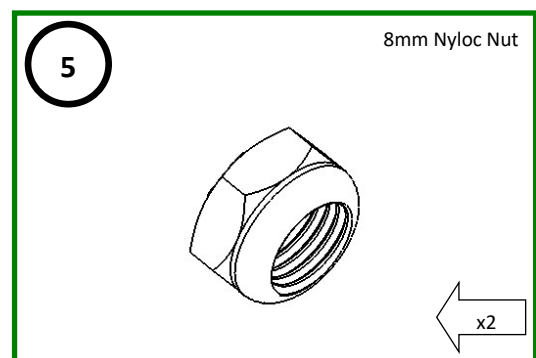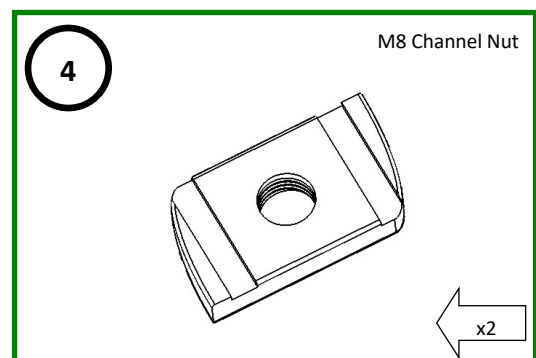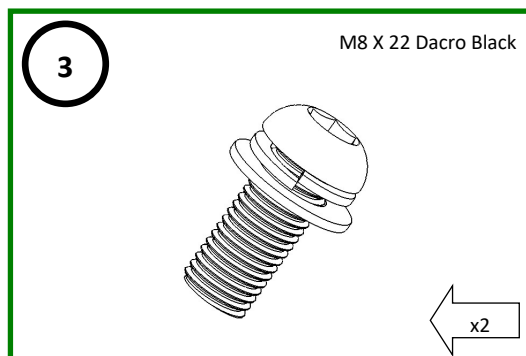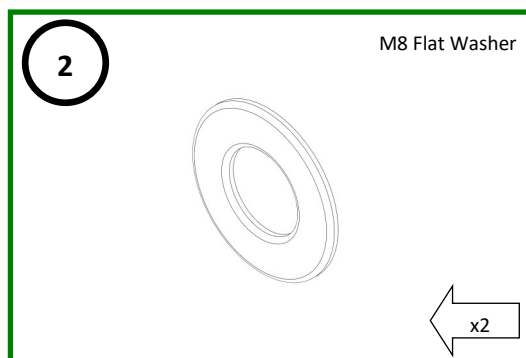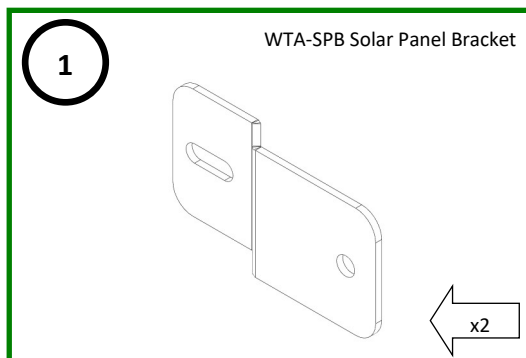



- This guide provides detailed instructions for fitting the mounting bracket either on the top of a platform, on the underside of a crossbar and underside of the side bar without any existing holes . You may choose the option that best suits your installation needs.

Top Mount




- Secure the mounting bracket to the top of the platform using the M8 Black dome head and the M8 unit provided in the kit.
- Once the bracket is secured you can now mount your Light

NOTE-Ensure the channel nuts are 90 degrees to the channels.




Check fastenings are firmly tensioned at regular intervals.
Do not overtighten, this will preserve the spring washers.

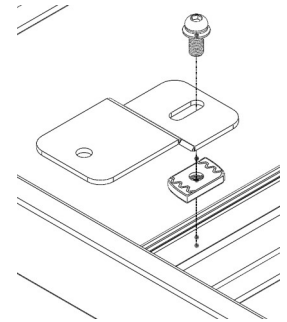

Mounting to the underside of the crossbar




- Remove the M8 Black dome head bolt leaving the channel nuts in the crossbar.
- Now place the bracket in position and tighten it with the M8 bolt you removed.
- Once the bracket is secured you can now mount your Light

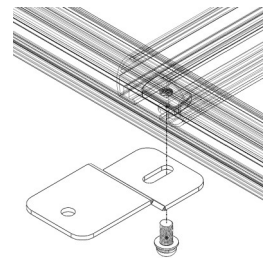

Mounting to the underside of the sidebar without any existing holes



- Decide the desirable position of the light mount
- Now drill a 5 mm pilot hole and step it up to a 9mm hole.
- Place your bracket into position and tighten with the M8 Black dome head and the M8 washer and Nyloc nut.
- Once the bracket is secured you can now mount your Light.

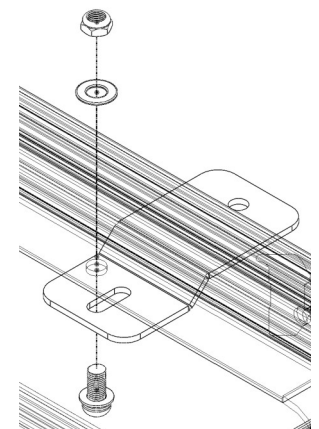

Thank you for your purchase.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration